
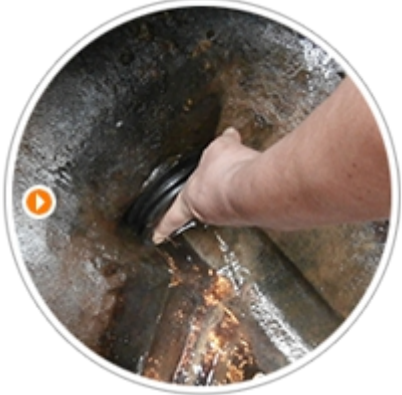



MF-3 Fitting Instructions

Step 1	Remove the drain cover. When fitting the valve we would recommend hosing or pouring one or two of buckets of water down the catchment to remove any sewage left in the chamber before fitting.	
Step 2	Flush your toilet and take note of which way the flow of water travels, looking for the last outlet the water flows through.	
Step 3	Place the MF-3 flap first (taking care that the hinge for the flap is at the top) into the 4 inch pipe the water has travelled into i.e. the discharge pipe.	
Step 4	Push the MF-3 into the pipe as far as it will go.	
Step 5	Now the valve is in place, gently push open the flap to ensure there is no resistance and the flap closes when released.	
Step 6	Replace the drain manhole cover, you are now protected!	