




Rat blockers are simply designed to be a one way valve stopping vermin travelling up drainpipes. This simple, robust, stainless steel system is fitted in the drain outlet, with it's one-way flap allowing all waste and vermin to pass out but stopping any vermin entering back up the pipes.

- 1** Locate the LAST manhole/inspection chamber. You can install the barrier by hand (the nut will need to be tightened to fit blocker to pipe using a spanner (not supplied) or it can be installed using an installation pole that is available separately
N.B. Check the flaps are the correct orientation before installing the unit, if incorrect it will result in a blockage.

- 2** Slide your rat blocker into the desired position, by pushing it until the stopper of the blocker is touching the sides of the chamber.

- 3** Once the rat blocker is in place, remove the installation pole.

- 4** Test the installation by flushing the toilet with toilet paper

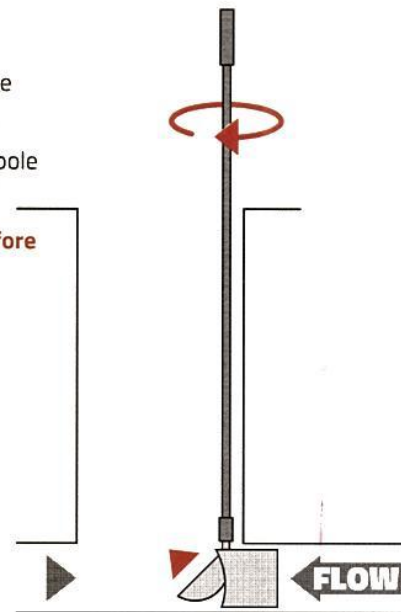

The Rat Blocker can easily and simply be removed for cleaning and maintenance purposes, but ensure the installation instructions are followed when re-installing the unit.

